


BLACK LIGHT ACCESSORIES

INSTRUCTIONS FOR ASSEMBLY OF MODULAR BLACK LIGHT SYSTEM HANDLE ADAPTOR



1. Remove Handle Adaptor and Ball W/Stud from Plastic Bag

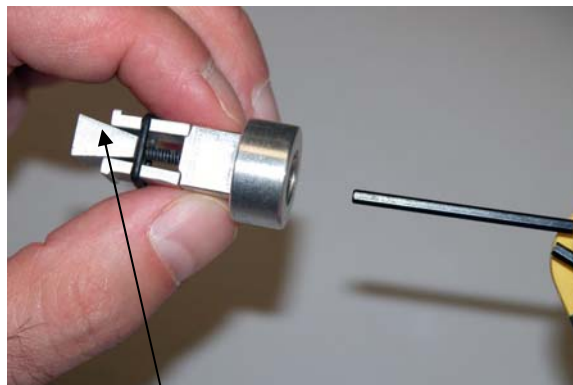

2. Position Wedge as shown above. This can be done by loosening the Allen screw using a 3/32 Allen Wrench (Not supplied)



3. Carefully insert Handle Adaptor into opening located on the bottom of the Black Light handle



4. Tighten Allen screw until firmly in place



5. Screw Ball into the Adaptor



6. Black Light can now be attached to the Modular System

MAGNAFLUX

A Division of Illinois Tool Works Inc.
3624 WEST LAKE AVENUE ■ GLENVIEW, ILLINOIS 60026
TEL 847.657.5300 ■ FAX 847.657.5388
www.magnaflex.com